



Connecting Cinetics Lynx to Dragonframe Software Shown with Dragonframe 3.6.3


1. Turn on Lynx controller, connect controller to computer with MicroUSB cable, and go to Settings > Run Dragonframe
2. Start Dragonframe Software. A message comes up showing the connection is successful.

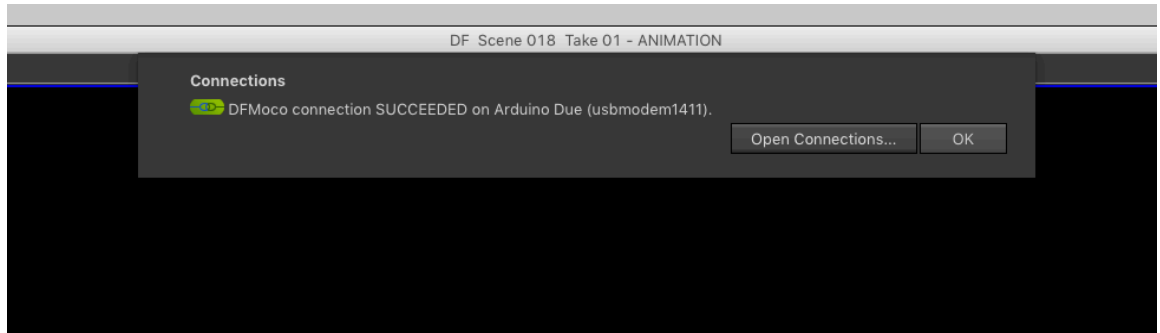


You can go to Scene > Connections and confirm ArcMoco #1 is connected.

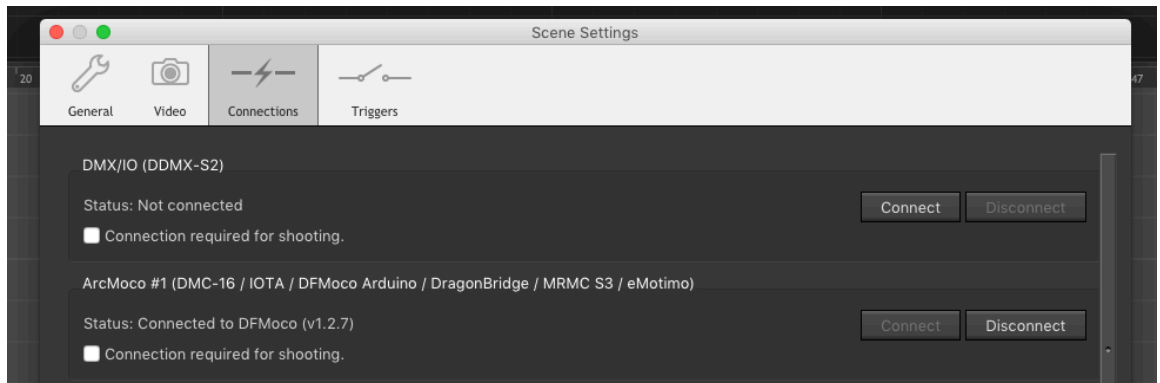

3. Next, click the Arc Motion Control button.

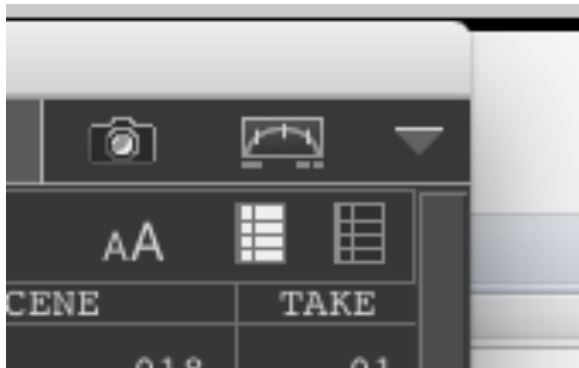

4. Then click the Add Axis button, and configure each axis.

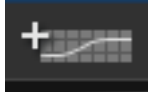

Each axis is on ArcMoco #1, with channels 1-3 representing pan, tilt, and slide. Here are the recommend motor settings:

Name:

Axis Setup

Connect: Function:

Channel:

Motor

Steps Per Unit: /

Jog Max Speed: steps/sec

Name:

Axis Setup


Connect: Function:

Channel:

Motor

Steps Per Unit: /

Jog Max Speed: steps/sec

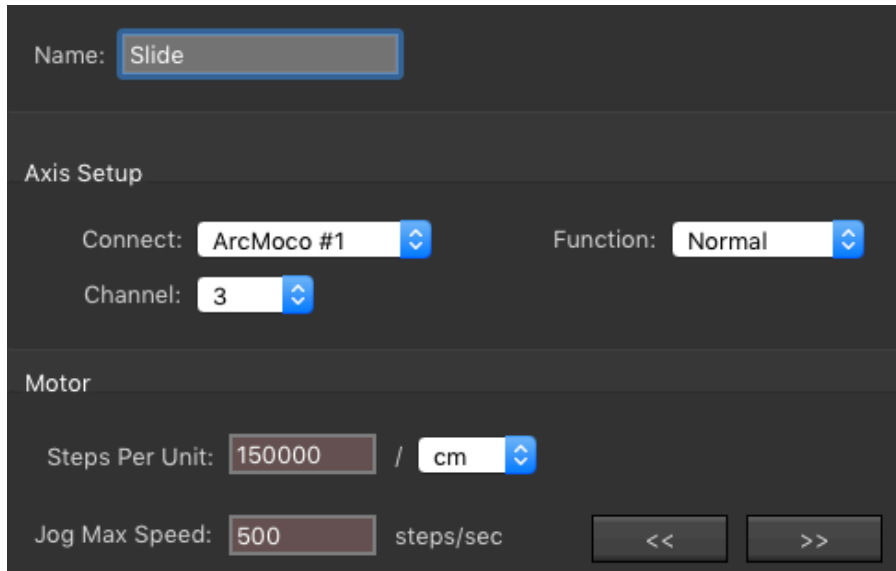

5. Scroll Motors using forward >> and backward << arrows to confirm connection.

